DATE : 5 SEP, 2011
MODEL MCU-5501 “DENVER”
ENGLISH I/M FOR APPROVAL
SIZE : 102 (W) X 136 (H) MM FOR EACH PAGE
MATERIAL : 80G WOODFREE PAPER
PRINTING COLOR : BLACK

OPERATING INSTRUCTIONS

DENVER®

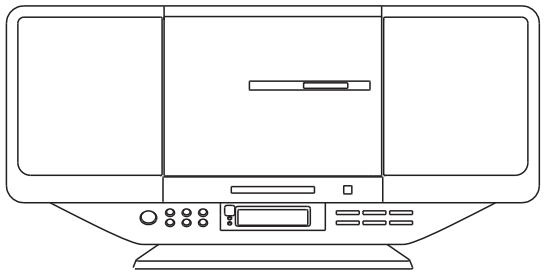

MICRO HI-FI CD RADIO SYSTEM WITH DIGITAL CLOCK

MODEL: MCU-5501

The lightning flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.

CAUTION
RISK OF ELECTRIC SHOCK DO NOT OPEN

WARNING: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.

The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO DRIPPING OR SPLASHING LIQUIDS.

NOTE: CAUTION SYMBOLS ARE PRINTED ON REAR OF UNIT.
PLEASE REFER TO INSTRUCTION MANUAL.

PLEASE NOTE: YOU WILL FIND THE RATING LABEL FOR THIS PRODUCT LOCATED ON THE REAR OF THE UNIT.

CAUTION
DO NOT EXPOSE TO DRIPPING OR SPLASHING LIQUIDS!

CAUTION: GROUNDING OR POLARIZATION. THE PRECAUTIONS SHOULD BE TAKEN SO THAT THE WIDER BLADE OF THE AC PLUG MUST MATCH THE SLOT IN RECEPTACLE "WALL SOCKET".

CAUTION: INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. AVOID EXPOSURE TO BEAM.
VORSICHT: UNSICHTBARE LASERSTRAHLUNG TRITT AUS, WENN DECKEL GEÖFFNET UND WENN SICHERHEITSVERRIEGELUNG ÜBERBRÜCKT IST. NICHT DEM STRAHL AUSSETZENI.
VARNING: OSYNLIG LASERSTRÁLNING NÄR DENNA DEL ÄR ÖPPNAD OCH SPÄRR ÄR URKOPPLAND. STRÁLEN ÄR FARLIG.
ADVARSEL: USYNLIG LASERSTRÁLING VED ÁBNING. NÁR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNDGÁ UDS/ETTELSE FOR STRÁLING.
ATTNENZIONE: RADIONS LASER INVISIDILE. NON GUARDARE DIRETTAMENTE NELLA SORGENTE DEL LASER.
ACHTUNG: LASERLINSE NICHT BERÜHREN UNSICHTBARER LASERSTRAHL.
AVISO: A LENTE NUNCA DEVE SER TOCADA.

CLASS 1 LASER PRODUCT
KLASSE 1 LASER PRODUKT
LASER DE CLASSE
LASER DI PRIMA CLASSE
KLASSE 1 LASER
LASER PRIMERA CLASE
LASER CLASSE 1
KLASSE 1 LASER PRODUKT

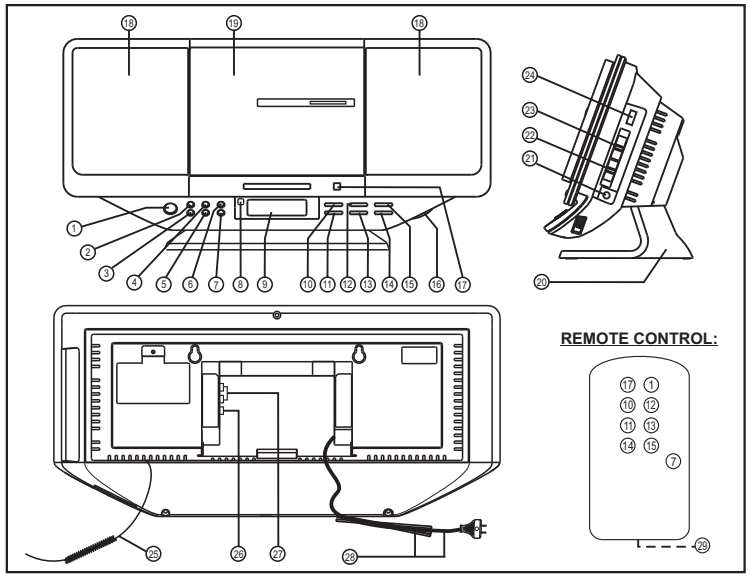

LOCATION OF CONTROLS

1. ON/ OFF (STANDBY) KEY
2. TIME SET KEY
3. SUPER-BASS (DBBS) KEY
4. CLOCK ADJUST **"HOUR"** KEY
5. CD **"REPEAT/ PROGRAM"** KEY
6. CLOCK ADJUST **"MINUTE"** KEY
7. SKIP +10/ FOLDER KEY
8. REMOTE CONTROL SENSOR
9. BLUE BACKLIT DISPLAY
10. CD **"PLAY/PAUSE"/ USB** KEY
11. CD **"BACK"** KEY
12. CD **"STOP"** KEY
13. CD **"NEXT"** KEY
14. VOLUME DOWN (-) KEY
15. VOLUME UP (+) KEY
16. RADIO TUNING KNOB
17. CD DOOR OPEN KEY
18. SPEAKERS (LEFT & RIGHT)
19. CD DOOR (MOTORIZED)
20. DESK STAND
21. HEADPHONE JACK
22. BAND SWITCH (AM/FM/STEREO)
23. FUNCTION SWITCH [RADIO/CD (MP3/USB)/ AUX]
24. USB SOCKET
25. FM-ANTENNA WIRE
26. SUB WOOFER OUTPUT SOCKET
27. AUX IN SOCKETS (LEFT & RIGHT)
28. AC-CORD & PLUG
29. BATTERY COMPARTMENT (REMOTE CONTROL)

POWER SUPPLY

- THIS SET WORKS ON NORMAL HOUSEHOLD AC-POWER.
- MAKE SURE THE SET VOLTAGE OF THE UNIT MATCHES YOUR LOCAL VOLTAGE.
- INSERT THE PLUG OF THE AC-CORD INTO A WALL OUTLET WITH AC-POWER.
- PRESS THE ON/ OFF KNOB TO SWITCH "ON" THE UNIT.

IMPORTANT : HOW TO TELL IF POWER IS "ON" ?
WHEN THE POWER IS "ON" THE ENTIRE DIGITAL DISPLAY WILL BE LIT UP WITH A "BLUE" BACK-LIGHT. THIS INDICATES THE HI-FI IS SWITCHED "ON".

OPERATION OF RADIO

- SET THE FUNCTION SWITCH TO "RADIO".
- SET THE RADIO BAND SELECTOR SWITCH TO THE DESIRED BAND.
- ROTATE TUNING KNOB TO TUNE-IN THE DESIRED STATION, AS DISPLAYED IN THE LCD DIGITAL DISPLAY.
- ADJUST THE VOLUME TO THE DESIRED LEVEL. (UP/ DOWN)
- TO IMPROVE FM-RADIO RECEPTION, FULLY EXTEND THE FM-ANTENNA WIRE AND ADJUST IT'S POSITION.
- TO IMPROVE AM (MW) RADIO RECEPTION, ROTATE OR RE-POSITION THE MAIN UNIT.
- THIS UNIT IS DESIGNED TO OPERATE WITHOUT EVER BEING TOTALLY POWERED "OFF". IT WILL EITHER BE "ON" OR IN "STANDBY MODE".
- ANYTIME DURING STANDBY MODE, YOU CAN SWITCH "ON" THE UNIT BY PRESSING THE "ON/ STANDBY" KEY (ON REMOTE CONTROL OR FRONT PANEL OF THE MAIN UNIT).
- SAVE ENERGY BY SWITCHING THE SYSTEM TO "STANDBY" MODE.

SUPER BASS (DBBS) FUNCTION

THE BUILT IN "SUPER BASS BOOSTER" CIRCUIT PROVIDES A POWERFUL ENHANCEMENT TO LOW FREQUENCY MUSIC, GIVING A STRONGER BASS SOUND WHICH IS IDEAL FOR "ROCK" OR "JAZZ" MUSIC.
AT ANYTIME DURING PLAYBACK, SIMPLY PRESS THE DBBS ON/ OFF KEY TO SWITCH ON OR OFF AS DESIRED.

CLOCK FUNCTION - HOW TO SET CORRECT TIME

- THIS SET HAS A BUILT-IN DIGITAL CLOCK, WHICH IS DISPLAYED WHEN THE UNIT IS IN "CD" MODE OR WHEN THE UNIT IS SWITCHED "OFF" (WITH AC-POWER SUPPLY CONNECTED).
- TO SET THE CORRECT TIME, PRESS AND HOLD THE "TIME SET SWITCH" AND PRESS THE "MINUTE" AND "HOUR" ADJUST SWITCHES TO ADVANCE TO THE CORRECT TIME.

INSERTION & REMOVAL OF DISCS

- ALWAYS ENSURE THE DISC IS NOT IN MOTION (NOT SPINNING) WHEN YOU PRESS THE CD-DOOR "OPEN" KEY. ALWAYS PRESS CD "STOP" KEY TO STOP THE DISC SPINNING FIRST.
- CAREFULLY PLACE A COMPACT DISC ONTO THE CENTER SPINDLE WITH THE LABEL SIDE (PRINTED SIDE OF DISC) FACING OUTWARDS (TOWARDS YOU).
- PRESS THE "OPEN" KEY TO AUTOMATICALLY CLOSE THE CD-DOOR. THE CD-DISPLAY WILL SHOW THE TOTAL NUMBER OF TRACKS ON THE DISC AFTER A FEW SECONDS. THE CD IS NOW READY TO BE PLAYED.
- TO REMOVE A DISC, PRESS THE OPEN KEY. THE DOOR WILL OPEN UPWARDS ALLOWING THE REMOVAL OF THE CD INSIDE.
- **IMPORTANT :** ALWAYS HOLD A CD BY IT'S EDGES. AVOID GETTING ANY FINGER-PRINTS, SMUDGES OR DIRT ONTO THE SURFACE OF A DISC. IN CASE THIS HAPPENS, USE A SPECIAL CD-CLEANING CLOTH OR CLEANING KIT TO REMOVE THE DIRT OR SMUDGES.

IMPORTANT

MOTORIZED AUTOMATIC CD-DOOR - OPERATION AND PRECAUTIONS

- **THIS UNIT HAS A MOTORIZED (MOTOR OPERATED) AUTOMATIC CD-DOOR.**
- **PLEASE NEVER TRY TO OPEN OR CLOSE THE DOOR MANUALLY (BY HAND)**
- **ALWAYS USE THE CD OPEN / CLOSE KEY**
- **WHEN OPENING, THE DOOR WILL SWING UPWARDS AND STOP AUTOMATICALLY WHEN IT IS FULLY OPEN. NEVER APPLY PRESSURE ON THE DOOR TO OPEN THE DOOR FASTER OR BEYOND ITS LIMIT.**
- **IF THERE IS ANY OBSTRUCTION WHEN OPENING THE DOOR (IF SOMETHING IS BLOCKING THE DOOR AND PREVENTING IT FROM OPENING) THE DOOR WILL AUTOMATICALLY STOP AND REVERSE DIRECTION (CLOSE) AFTER 4-5 SECONDS TO PREVENT DAMAGE TO THE CD-DOOR AND MOTOR.**

NORMAL CD OPERATION

- SET THE FUNCTION SWITCH TO "CD/ MP3/ USB". INSERT A CD AS DESCRIBED.
- ONCE THE CD-DOOR IS CLOSED (WITH A DISC INSIDE) THE SET WILL IMMEDIATELY READ THE DISC AND DISPLAY THE NUMBER OF SONGS (TRACKS) ON THE CD.
- PRESS THE PLAY/PAUSE KEY ⏯ . THE DISK WILL START SPINNING AND THE FIRST SONG (TRACK) WILL START PLAYING. THE DISPLAY WILL INDICATE THE CURRENT TRACK NUMBER. ("001" IF IT IS THE FIRST TRACK).
- TO PAUSE PLAY BACK AT ANYTIME DURING PLAYBACK, PRESS THE "PLAY/PAUSE" KEY ⏯ . PRESS PLAY/PAUSE KEY ⏯ TO RESUME OPERATION AT THE SAME TRACK AND POSITION.
- AT ANYTIME DURING PLAYBACK, PRESS THE "STOP" SWITCH ■ TO STOP OPERATION OF THE SET. THIS WILL RESET THE SET TO THE FIRST TRACK (IF YOU PRESS PLAY AFTER STOP, THE FIRST TRACK WILL ALWAYS START PLAYING). HOWEVER, THE DIGITAL DISPLAY WILL SHOW THE TOTAL NUMBER OF TRACKS ON THE DISC.
- AT ANYTIME DURING PLAYBACK, "PRESS AND RELEASE" THE SEEK/SCAN SWITCHES : ⏮ OR ⏭ TO SKIP BACKWARDS OR FORWARDS BY ONE TRACK, AS DESIRED.

- AT ANYTIME DURING PLAYBACK, "PRESS AND HOLD" THE BACK/ NEXT KEYS : ⏮ OR ⏭ TO FAST-REVERSE OR FAST-FORWARD THE SPECIFIC TRACK, WHICH IS CURRENTLY PLAYING.
- AT ANYTIME DURING PLAYBACK, PRESS THE "REPEAT/ PROGRAM" KEY AS FOLLOWS:

REPEAT = TO REPEAT THE CURRENT TRACK

REPEAT ALBUM = TO REPEAT THE CURRENT FOLDER (CD-MP3)

REPEAT ALL = TO REPEAT ALL TRACKS (FULL CD)

HOW TO PLAY MP3 DISCS

- INSERT A MP3 CD DISC, CLOSE THE DOOR.
- SLIDE THE FUNCTION SWITCH TO "CD/ MP3/ USB" POSITION.
- THE DISK WILL SPIN AND PERFORM A FULL CHECK OF THE DISC TO COUNT THE TOTAL NUMBER OF SONGS. THEN PLAYBACK OF THE FIRST SONG (TRACK) WILL BEGIN AND THE DISPLAY WILL INDICATE THE CURRENT TRACK NO: (001).
- IF YOUR DISC HAS "FOLDER" (SEE BELOW) THE DISPLAY WILL SHOW THE FOLDER NUMBER (eg. F01, F02, etc..) EVERY 5 SECONDS.
- AT ANY TIME DURING PLAYBACK, PRESS AND RELEASE ⏮ OR ⏭ TO SKIP BACKWARDS OR FORWARDS BY ONE TRACK.
- MP3 DISCS OFTEN HAVE SEVERAL “FOLDER” (SUB-DIRECTORIES) WHICH CONTAIN GROUPS OF SONGS.
- IF YOUR MP3-CD HAS NO FOLDERS, YOU CAN USE THE **SKIP + 10/ FOLDER** BUTTON TO JUMP 10 SONGS AHEAD. THIS IS USEFUL IF YOU HAVE MANY SONGS ON YOU WANT TO QUICKLY JUMP TO A PARTICULAR SONG.
- PRESS & RELEASE **SKIP + 10/ FOLDER** SEVERAL TIMES UNTIL YOU REACH A SONG NUMBER NEAR TO YOUR DESIRED SONG, AND THEN PRESS "BACK"⏮ OR "NEXT"⏭ REPEATEDLY TO ARRIVE AND THE EXACT SONG YOU DESIRE.
- IF YOUR MP3-CD HAS FOLDERS, YOU CAN SELECT THE FOLDER TO PLAYBACK BY PRESSING AND HOLDING THE **SKIP + 10/ FOLDER** BUTTON FOR ABOUT 2 SECONDS.
- EACH TIME YOU PRESS & HOLD THE **SKIP + 10/ FOLDER** BUTTON (FOR 2 SECONDS), THE PLAYER JUMPS TO THE FIRST SONG IN THE NEXT FOLDER. (THE DISPLAY WILL ALTERNATE BETWEEN THE SONG NUMBER & THE FOLDER NUMBER EVERY 5 SECONDS). (NOTE: THE "FOLDER" FUNCTION ONLY WORKS ON MP3-DISCS WHICH HAVE FOLDERS. IF YOUR DISC HAS NO FOLDERS, PRESSING **SKIP + 10/ FOLDER** WILL PERFORM THE "SKIP +10" FUNCTION).

USB DRIVE FLASH MEMORY MP3 PLAYBACK

- THIS UNIT IS EQUIPPED WITH A USB SOCKET WHICH CAN ACCEPT AND PLAY MP3 FILES STORED ON STANDARD USB FLASH DRIVES (ALSO KNOWN AS "PEN DRIVES") WHICH ARE FOR MEMORY STORAGE. (COMPATIBLE WITH USB VERSION 1.1 & 2.0).
- TO UTILIZE THIS FACILITY, FIRST INSERT AN USB-DRIVE INTO THE CORRECT SLOT.
- SET THE FUNCTION SWITCH TO "CD/ MP3/ USB" POSITION FIRST, THEN PRESS & HOLD THE "PLAY/ PAUSE/ USB" KEY FOR 2 SECONDS, THE DISPLAY WILL SHOW THE "USB" SYMBOL.
- AFTER THE DISPLAY SHOWN THE "**USB**" SYMBOL, THE UNIT WILL CHECK IF ANY MP3 SONG FILES ARE FOUND.
- IF MP3 FILES ARE FOUND, THE SET WILL START PLAYBACK OF THE FIRST MP3 SONG FILE & THE DISPLAY WILL INDICATE THE TRACK NUMBER JUST LIKE A MP3-CD PLAYBACK.
- PLAYBACK CONTROL (PLAY, PAUSE, BACK, NEXT, STOP) ARE ALSO EXACTLY SAME AS WITH A MP3-CD DISC.
- YOU MAY ALSO USE THE "SKIP +10/ FOLDER" KEY IN THE SAME MANNER AS WITH MP3-CD PLAYBACK.
- YOU CAN ALSO PROGRAM THE PLAYBACK OF UPTO 99 MP3 TRACKS (SONGS) SIMPLY FOLLOW THE SAME PROCEDURE AS DESCRIBED IN THE NEXT SECTION : "PROGRAMMING THE CD-PLAYER".

IMPORTANT
REMOVAL OF USB DRIVES

NEVER REMOVE (OR UNPLUG) USB-DRIVES FROM THE SET DURING PLAYBACK OF MP3 SONGS FROM THESE MEDIA. ALWAYS PRESS [STOP] FIRST AND THEN SLIDE THE FUNCTION SWITCH TO ANOTHER SOURCE (eg. "RADIO") BEFORE REMOVING OR UNPLUGGING USB MEMORY, TO PREVENT DAMAGE TO YOUR SONG FILES OR MEMORY DEVICES.

NOTE:

ALTHOUGH THIS PRODUCT IS FULLY COMPATIBLY WITH USB 1.1 & 2.0 STANDARDS, A SMALL PERCENTAGE (ABOUT 5%) OF USB FLASH DRIVES MIGHT NOT BE READABLE, DUE TO THOSE USB-FLASH DRIVE MANUFACTURERS NON-COMPLIANCE WITH THE FULL (OFFICIAL) USB 1.1 / 2.0 STANDARDS.
IMPORTANT: THIS UNIT DOES NOT SUPPORT USB-MP3 PLAYER, DUE TO THEIR INHERENT LACK OF SOFTWARE COMPATIBILITY. ONLY USB "PEN DRIVES" (FLASH MEMORY USB DRIVES) CAN BE USED, FOR MP3 PLAYBACK.

IMPORTANT POINT

Please do NOT use a USB Extension Cable to connect your USB FLASH DRIVE to the USB PORT of this unit. Such cables can pick up additional interference which can corrupt the data flow, preventing normal operation and usage of the USB port. Always connect your USB Flash Drive DIRECTLY to the USB PORT without any USB extension cables.

PROGRAMMING THE CD-PLAYER

- THE CD PLAYER CAN BE PROGRAMMED TO PLAY ANY SEQUENCE OF UPTO 99 TRACKS (FOR CD/ MP3), AS DESIRED.
- ALWAYS PRESS THE STOP [■] KNOB BEFORE STARTING THE PROGRAMMING.
- PRESS THE PROGRAM KNOB, THE DISPLAY WILL SHOW A [PROG] SYMBOL AND THE DISPLAY WILL SHOW "*P01*" , TO INDICATE THAT THE SET IS NOW IN "MEMORY PROGRAMMING MODE", AT MEMORY POSITION NO. 1.
- PRESS THE NEXT/BACK KNOBS [⏮] OR [⏭] TO SELECT THE TRACK (SONG) NUMBER YOU WISH TO BE STORED IN THE FIRST MEMORY (PROGRAM) POSITION, AND PRESS THE PROGRAM KNOB TO CONFIRM YOUR SELECTION.
- WHEN YOU PRESS PROGRAM KNOB THE DISPLAY WILL ADVANCE TO THE NEXT MEMORY POSITION NUMBER (EG. "*P02*" FOR 2ND POSITION).
- REPEAT THE PREVIOUS 2 STEPS, EACH TIME SELECTING ANY TRACK NUMBER OF YOUR CHOICE TO BE STORED IN THE SUCCESSIVE MEMORY (PROGRAM) POSITIONS.
- AFTER EACH TRACK NUMBER, REMEMBER TO PRESS THE PROGRAM KNOB.
- AFTER A MAXIMUM OF 99 SONGS (OR LESS) HAVE BEEN SELECTED AS DESCRIBED ABOVE, PRESS THE PROGRAM KNOB.
- ALSO, THE [PROG] SYMBOL WILL REMAIN "ON" TO INDICATE THAT YOU HAVE SAVED A PROGRAM-MEMORY (SEQUENCE).
- PRESSING PLAY [⏯] WILL NOW PLAY BACK THE "SAVED SEQUENCE" IN THE PROGRAM MEMORY.
- PRESSING NEXT/ BLACK WILL MOVE TO THE NEXT OR PREVIOUS SONG IN THE SAVED SEQUENCE.
- TO CLEAR (CANCEL) THE ENTIRE PROGRAM WHICH IS STORED IN THE MEMORY, SIMPLY PRESS "STOP" [■] , OR SWITCH "OFF" THE SET.

USING THE AUDIO LINE IN CONNECTION (AUX-IN)

- YOU CAN CONNECT THE AUDIO OUTPUT OF AN EXTERNAL DEVICE SUCH AS A DVD (OR MP3) PLAYER TO THIS UNIT, TO LISTEN TO THE SOUND OF THAT DEVICE THROUGH THE HIGH QUALITY AMPLIFIER OF THIS MUSIC SYSTEM.
- TO CONNECT THE EXTERNAL DEVICE (eg. DVD OR MP3 PLAYER) PLEASE USE A STANDARD RCA CABLE TO CONNECT THE "AUDIO LINE-OUT" OF THE DEVICE (LEFT AND RIGHT CHANNELS) TO THE "AUX-IN" RCA JACKS (LEFT AND RIGHT) ON THE REAR PANEL OF THIS UNIT. (CABLE IS NOT INCLUDED).
- SWITCH ON THE POWER OF THE MAIN UNIT AND THE EXTERNAL DEVICE.
- SWITCH THE FUNCTION SELECTOR TO "AUX".
- START PLAYBACK OF THE EXTERNAL DEVICE (eg. DVD OR MP3 PLAYER) AND ADJUST THE VOLUME CONTROL OF THE MAIN UNIT TO THE DESIRED LEVEL.
- REMEMBER TO SWITCH OFF THE POWER OF THE MUSIC SYSTEM (MAIN UNIT) WHEN YOU ARE FINISHED USING THE EXTERNAL DEVICE.

CONNECTING AN EXTERNAL POWERED SUBWOOFER (NOT INCLUDED)

- THIS UNIT HAS A BUILT IN SUBWOOFER CONNECTION WHICH CAN BE CONNECTED TO ANY STANDARD POWERED SUBWOOFER.
- BY CONNECTING TO A POWERED SUBWOOFER, THE LOW FREQUENCY (BASS SOUND) CAN BE STRONGLY ENHANCED TO PROVICE A MUCH RICHER AND DEEPER SOUND TO YOUR MUSIC.
- TO USE THIS FACILITY, SIMPLY CONNECT ANY STANDARD POWERED SUBWOOFER (EASILY AVAILABLE FROM MOST MUSIC EQUIPMENT SHOPS) USING THE RCA JACK ON THE REAR PANEL OF THE MAIN UNIT.
- SWITCH ON THE POWERED SUBWOOFER.
- PLAY ANY MUSIC SOURCE (CD or RADIO or AUX) AS USUAL.
- YOU WILL IMMEDIATELY NOTICE THE DEEPER SOUND, WHICH CAN BE FURTHER ENHANCED BY SWITCHING ON THE "SUPER BASS" FUNCTION ON THE MAIN UNIT.
- PLEASE NOTE THAT "PASSIVE" (NON-POWERED) SUBWOOFERS WILL NOT WORK WITH THIS UNIT.

SPECIFICATIONS

POWER SUPPLY : ..... AC 230V ~ 50 Hz
POWER CONSUMPTION : 25W
SPEAKER : ..... 3½" x 2
FREQUENCY : ..... AM 522 - 1620 kHz
FM 87.5 - 108 MHz

THE APPARATUS SHOULD NOT BE EXPOSED TO DRIPPING OR SPLASHING AND NO OBJECTS FILLED WITH LIQUIDS SHOULD BE PLACED ON THE APPARATUS.
THE MARKING AND RATING LABEL IS LOCATED AT REAR ENCLOSURE OF THE APPARATUS.
THE MAINS PLUG IS USED AS THE DISCONNECT DEVICE AND IT SHALL REMAIN READILY OPERABLE. TO BE COMPLETELY DISCONNECTED THE POWER INPUT, THE MAINS PLUG OF THE APPARATUS SHALL BE DISCONNECTED FROM THE MAINS COMPLETELY. THE MAINS PLUG SHOULD NOT BE OBSTRUCTED OR SHOULD BE EASILY ACCESSED DURING INTENDED USE.
UNDER THE INFLUENCE OF ELECTROSTATIC PHENOMENON, THE PRODUCT MAY MALFUNCTION AND USER TO POWER RESET.
EXCESSIVE SOUND PRESSURE FROM EARPHONES AND HEADPHONES CAN CAUSE HEARING LOSS.
BATTERY SHALL NOT BE EXPOSED TO EXCESSIVE HEAT SUCH AS SUNSHINE, FIRE OR THE LIKE.
CAUTION **DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.**

SYSTEM SET UP PROCEDURE

A. AS A "SHELF SYSTEM" (TABLE TOP USE)

- INCLUDED 1 PC STAND FOR THE MAIN UNIT ( )

FIXING THE BASE TO THE UNIT:

1. PLACE THE STAND UNDER THE UNIT.

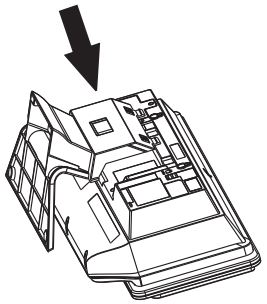

2. SLIDE THE STAND UPWARD (SEE DIAGRAM BELOW).

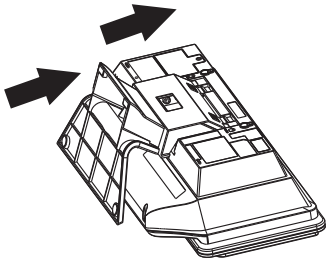

3. STOP WHEN THE INDICATOR MARK ON THE STAND IS ALIGNED WITH THE LOCK SYMBOL ON THE REAR CABINET.
(TO RELEASE THE STAND FROM THE UNIT , SLIDE THE STAND DOWNWARDS (OPPOSITE DIRECTION) UNTIL IT BECOMES RELEASED.

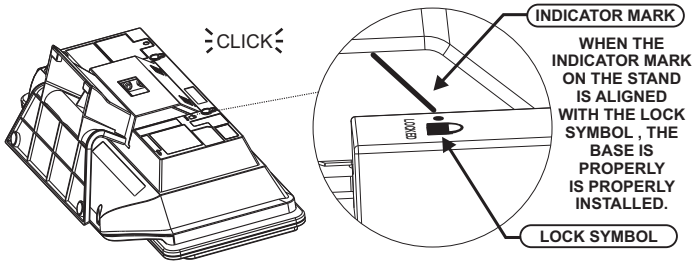
CLICK
INDICATOR MARK
WHEN THE INDICATOR MARK ON THE STAND IS ALIGNED WITH THE LOCK SYMBOL , THE BASE IS PROPERLY IS PROPERLY INSTALLED.
LOCK SYMBOL

INSTRUCTIONS ON ENVIRONMENT PROTECTION

Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the approriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

CE

ALL RIGHTS RESERVED
COPYRIGHT DENVER ELECTRONICS A/S
WWW.DENVER-ELECTRONICS.COM

Imported by:

Inter Sales A/S
Stavneagervej 22
DK-8250 Egaa
Denmark